

Raspberry Pi Serial console cable

- 1. Turn off the DC power from Rs-pi
- 2. The Red wire plug-in to P1
- 3. Connect the DB9 to your serial port
- 4. Run the Hyper terminal program from


PC, and do the basic setting as follow


The necessary settings are:


- Speed: 115200 baud
- Data bits: 8 Stop bits: 1
- Parity: None
- Flow control: None
- 5. Turn on the power of your Rs Pi
- 6. You will see the Pi boot procedure from the screen.

3 LED for indicate the states of the cable DC 3.3V (Red) , Tx (Green) , Rx (Yellow)




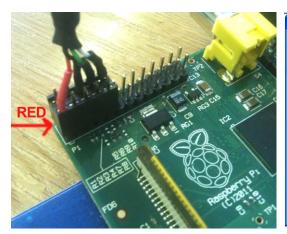

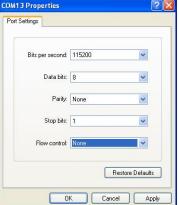

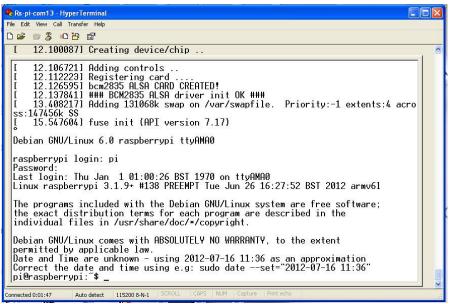

In HyperTerminal

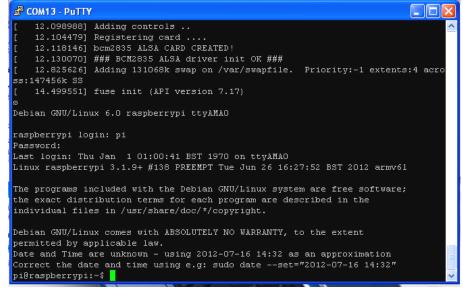

In PuTTY