



Turn ON:
 Connect PWRKEY to GND for 3 sec

Turn OFF:
 Connect PWRKEY to GND for 1-2 sec

