


Autonics COUNTER/TIMER FX/FXH/FXL SERIES

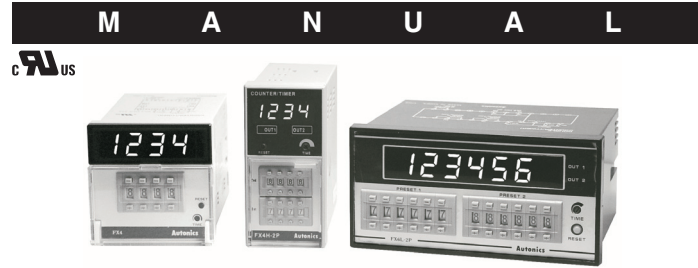

Thank you very much for selecting Autonics products.
For your safety, please read the following before using.

Caution for your safety

- Please keep these instructions and review them before using this unit.
- Please observe the cautions that follow:
 - Warning** Serious injury may result if instructions are not followed.
 - Caution** Product may be damaged, or injury may result if instructions are not followed.
- The following is an explanation of the symbols used in the operation manual.
 - Caution**: Injury or danger may occur under special conditions.

Warning

- In case of using this unit with machineries (Nuclear power control, medical equipment, vehicle, train, airplane, combustion apparatus, entertainment or safety device etc), it requires installing fail-safe device, or contact us for information required. It may result in serious damage, fire or human injury.
- This unit must be mounted on Panel. It may give an electric shock.
- Do not connect terminals when it is power on. It may give an electric shock.
- Do not disassemble and modify this unit, when it requires. If needs, please contact us. It may give an electric shock and cause a fire.

Caution

- This unit shall not be used outdoors. It might shorten the life cycle of the product or give an electric shock.
- When wire connection, No.20AWG(0.50mm²) should be used and screw bolt on terminal block with 0.74N·m to 0.90N·m strength. It may result in malfunction or fire due to contact failure.
- Please observe specification rating. It might shorten the life cycle of the product and cause a fire.
- Do not use the load beyond rated switching capacity of Relay contact. It may cause insulation failure, contact melt, contact failure, relay broken, fire etc.
- In cleaning the unit, do not use water or an organic solvents. It might cause an electric shock or fire that will result in damage to the product.
- Do not use this unit at place where there are flammable or explosive gas, humidity, direct ray of the sun, radiant heat, vibration, impact etc. It may cause explosion.
- Do not inflow dust or wire dregs into inside of this unit. It may cause a fire or mechanical trouble.

Input logic selection

Please be sure to turn power OFF before changing input logic.


FX series
Input logic is changeable by input logic selection switch located at the one-side of case.

FXH series
Input logic is changeable by input logic selection switch located at the terminal block.

FXL series
Input logic is changeable by input logic selection switch (SW3) located at the inside of the case.

No-voltage input (NPN) / Voltage input (PNP) diagrams and switch positions are shown.

Panel cut-out

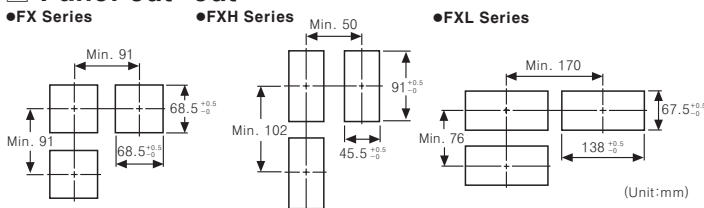

Input operation mode (Counter)


Input mode	SW1	Counting chart	
		Voltage input type	No-voltage input type
Up/Down-A (Command input)	ON	[Timing diagram]	[Timing diagram]
	OFF	[Timing diagram]	[Timing diagram]
Up/Down-B (Individual input)	ON	[Timing diagram]	[Timing diagram]
	OFF	[Timing diagram]	[Timing diagram]
Up/Down-C (Phase difference input)	ON	[Timing diagram]	[Timing diagram]
	OFF	[Timing diagram]	[Timing diagram]
Up (Up input)	ON	[Timing diagram]	[Timing diagram]
	OFF	[Timing diagram]	[Timing diagram]
Up/Down-D (Command input)	ON	[Timing diagram]	[Timing diagram]
	OFF	[Timing diagram]	[Timing diagram]
Up/Down-E (Individual input)	ON	[Timing diagram]	[Timing diagram]
	OFF	[Timing diagram]	[Timing diagram]
Up/Down-F (Phase difference input)	ON	[Timing diagram]	[Timing diagram]
	OFF	[Timing diagram]	[Timing diagram]
Down (Down input)	ON	[Timing diagram]	[Timing diagram]
	OFF	[Timing diagram]	[Timing diagram]

*A: Over Min. signal width, B: Over 1/2 of Min. signal width.
Counting miss by one (±1) is occurred if the signal width of A or B is less than min. signal width.
*The above specification are changeable without notice anytime.


Specifications

Series	FX	FXH	FXL
Digit	4	6	6
Model	FX4-2P FX4-1	FX6-2P FX6-1	FX4H-2P FX4H-1 FX6L-2P FX6L-1
Power supply	100-240VAC 50/60Hz 12-24VDC 50/60Hz, 12-24VDC		
Allowable voltage range	90 to 110% of rated voltage		
Power consumption	Indication: Approx. 6VA, Single preset: Approx. 7VA, Double preset: Approx. 8VA (240VAC 50/60Hz) AC/DC power Indication: Approx. 5.8VA, Single preset: Approx. 6.8VA, Double preset: Approx. 7.8VA (24VDC 50/60Hz) Indication: Approx. 2.7W, Single preset: Approx. 3.3W, Double preset: Approx. 3.8W (24VDC)		
Max. counting speed for CP1, CP2	Selectable 1cps/30cps/2kcps/5kcps by inner DIP switch		
Min. input signal width	RESET input, INHIBIT input: Approx. 20ms		
Input method	Input logic is selectable [Voltage input] Input impedance: 5.4kΩ, "H" level: 5-30VDC, "L" level: 0-2VDC [No-voltage input] Short-circuit impedance: Max. 1kΩ, Residual voltage: Max. 2VDC, Open-circuit impedance: Min. 100kΩ		
One-shot output time	1st output: 0.5sec., 2nd output: 0.05 to 5sec.		
Control output	Single preset type: SPDT(1c) Double preset type: 1st output SPDT(1c), 2nd output: SPDT(1c)		
Memory retention	10 years (EEPROM)		
External power supply	12VDC ±10% 50mA Max.		
Ambient temperature	-10 ~ 55°C (at non-freezing status)		
Storage temperature	-25 ~ 65°C (at non-freezing status)		
Ambient humidity	35 ~ 85%RH		
Approval	UL (100-240VAC 50/60Hz)		


Input connection

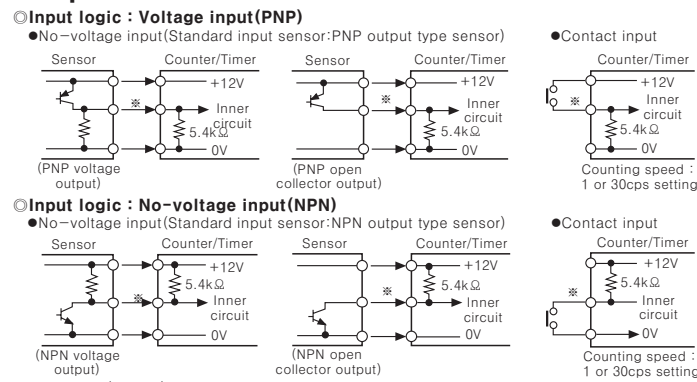

Counting operation of indication model

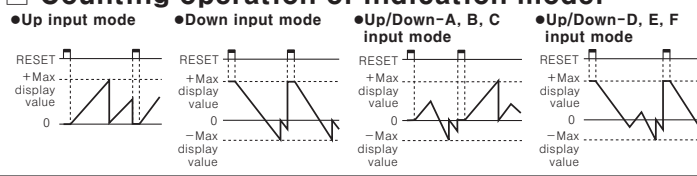


Case & DIP switch detachment

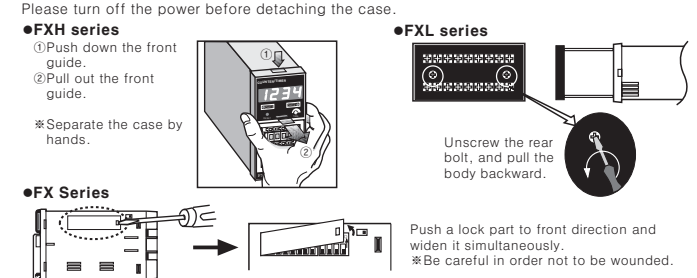


Output operation mode

Output mode	Input mode	Operation after Count up	
		Up, Up/Down-A, B, C mode	Down, Up/Down-D, E, F mode
F	SW1 ON	[Timing diagram]	[Timing diagram]
	SW1 OFF	[Timing diagram]	[Timing diagram]
N	SW1 ON	[Timing diagram]	[Timing diagram]
	SW1 OFF	[Timing diagram]	[Timing diagram]
C	SW1 ON	[Timing diagram]	[Timing diagram]
	SW1 OFF	[Timing diagram]	[Timing diagram]
R	SW1 ON	[Timing diagram]	[Timing diagram]
	SW1 OFF	[Timing diagram]	[Timing diagram]
K	SW1 ON	[Timing diagram]	[Timing diagram]
	SW1 OFF	[Timing diagram]	[Timing diagram]
P	SW1 ON	[Timing diagram]	[Timing diagram]
	SW1 OFF	[Timing diagram]	[Timing diagram]
Q	SW1 ON	[Timing diagram]	[Timing diagram]
	SW1 OFF	[Timing diagram]	[Timing diagram]
S	SW1 ON	[Timing diagram]	[Timing diagram]
	SW1 OFF	[Timing diagram]	[Timing diagram]
Counter	SW1 ON	[Timing diagram]	[Timing diagram]
	SW1 OFF	[Timing diagram]	[Timing diagram]
Timer	SW1 ON	[Timing diagram]	[Timing diagram]
	SW1 OFF	[Timing diagram]	[Timing diagram]


Input · output connection

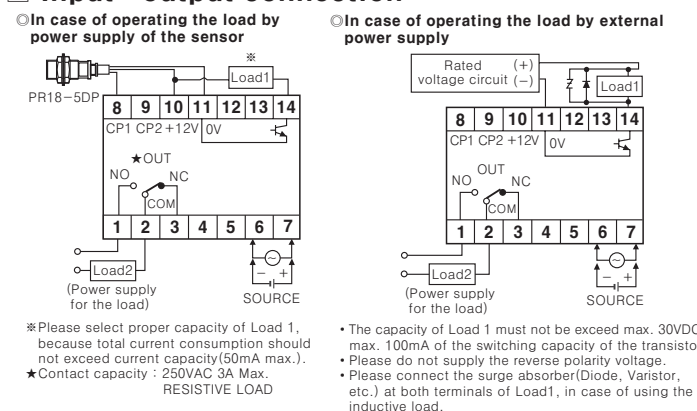

Selection by DIP switches

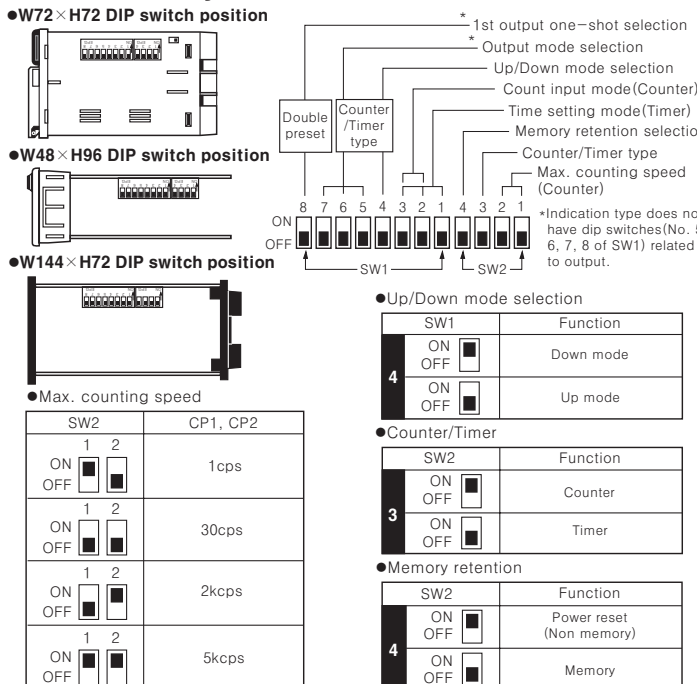

Decimal point setting (Counter)

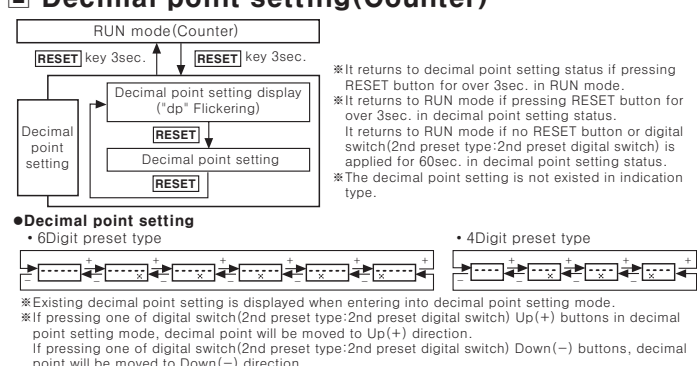

Time setting mode (Timer)

SW1	4Digit	6Digit
A	99.99sec	99999.9sec
B	999.9sec	999999sec
C	9999sec	99min 59.99sec
D	99min 59sec	99min 59.9sec
E	999.9min	99999.9min
F	99hour 59min	99hour 59min 59sec
G	999.9hour	9999hour 59min
H	9999hour	99999.9hour

• Selection of one-shot output or hold output for 1st output.

SW1	Function
ON	1st output: One-shot output
OFF	1st output: Hold output

Caution for using

- DIP switch setting
Please be sure to turn power OFF before changing Counter/Timer DIP switches setting. If DIP switches setting is changed in power OFF, Counter/Timer must be reset by manual reset or external reset after power ON.
 - Error

Error display	Error contents	Return method
Err 0	Zero setting value status	Change setting value which is not zero

 - *Output is OFF when error is displayed.
 - *If 1st preset value is changed to zero ("0"), 1st output keeps OFF status.
 - *No Error display is appeared in indication type.
 - Unit sticker
The unit sticker is found at the inner box of FX/FXL series. According to the usage, the unit sticker can be used.

COUNTER	mm	Inch	mm	Inch
TIMER	m	hour	m	hour
COUNTER	sec	cm	sec	cm
TIMER	min	yd	min	yd
 - Power
 - ① The inner circuit voltage starts to rise up for the first 100ms after power on, the input may not work at this time. And also the inner circuit voltage drops down for the last 500ms after power off, the input may not work at this time.
 - ② Please use the power within rating power and apply or cut the power at once to prevent from chattering.
 - Input signal line
 - ① Shorten the cable distance between the sensor and this product.
 - ② Please shielded wire for input signal needed to be long.
 - ③ Please wire input signal line separated from power line.
 - When test dielectric voltage and insulation resistance of the control panel with this unit installed.
 - ① Please isolate this unit from the circuit of control panel.
 - ② Please make all terminals of this unit short-circuited.
 - Do not use this unit at below places.
 - ① Place where there are severe vibration or impact.
 - ② Place where strong alkalis or acids are used.
 - ③ Place where there are direct ray of the sun.
 - ④ Place where strong magnetic field or electric noise are generated.
 - Installation environment
 - ① It shall be used indoor
 - ② Altitude Max. 2000m
 - ③ Pollution Degree 2
 - ④ Installation Category II.
- *It may cause malfunction if above instructions are not followed.**

Main products

Autonics Corporation
http://www.autonics.com

Satisfiable Partner For Factory Automation

HEADQUARTERS
41-5, Yongdang-ni, Ulsang-eup, Yangsan-si, Gyeongsang, 626-847, Korea

INTERNATIONAL SALES
Bldg. 402 3rd Fl., Bucheon Techno Park, 193, Yakdae-dong, Wonmi-gu, Bucheon-si, Gyeonggi-do, 420-734, Korea
TEL: 82-32-610-2730 / FAX: 82-32-329-0728

E-mail: sales@autonics.net

EP-KE-01-008K